
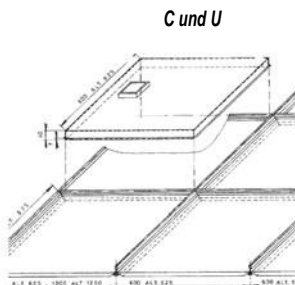


# ECOSUN LOW TEMPERATURE RADIANT HEATING PANELS


Protection Class I, Voltage 230 V / 50 Hz

## INSTALLATION

*For ceiling installation only*

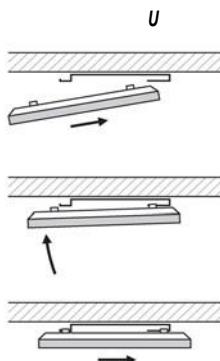


### FIXING FRAME

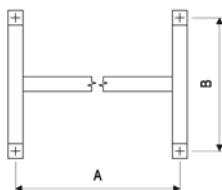

Platte	A (mm)	B (mm)
300U	340	280
600U, 700U	935	280
850U, 1000U		

### MINIMUM DISTANCES\*

300-600W	$h = 2,5m$	$x = 0,6m$
700W	$h \geq 2,5m$	$x = 1,2m$
850W	$h \geq 2,6m$	$x \geq 1,2m$
1000W	$h \geq 2,6m$	$x \geq 1,2m$

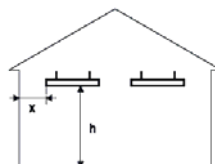

\* Not applicable to industrial and agricultural applications. The distances must be observed in areas where people stay for a long time.



# FENIX

---

## 1.1 Type: Ecosun 300U, 600U, 700U, 850U, 1000U (IP44)

---

**Use:** Flats, offices, schools, hospitals, shops, industry and agricultural premises, etc.

**Fixing:** Preferentially, fix the panel in a horizontal position to a ceiling with a fixing frame or suspend it on chains or cables. The panels can be installed on flammable materials. The distance of front and side walls of the panel from flammable objects must be at least 10 cm. Panel dimensions are typified for inserting the panels in cassette lower ceilings.

**Installation:** When mounting is carried out by means of a fixing frame, mark fixing points and fasten the frame with dowels to the ceiling or ceiling construction. Connect the supply lead to the network in accordance with colour marking of conductors. When putting the panel on the fixing frame, first push the panel partially (approx. 10 mm) on the rear shaped ends of frame girders and then incline the panel to the ceiling or ceiling construction so that the front catches may be pushed horizontally on the frame girders. When installing the panel on chains or cables, fix the chains or cables to four catches with  $\varnothing$  6 mm holes by means of snap-hooks or similar fixtures.

---

## 1.2 Type: Ecosun 300c, 600c (IP20)

---

**Use:** In cassette lower ceilings 600x600, 600x1200 (Thermatex, Rockfon, Armstrong).

**Installation:** To a lower ceiling grid of respective dimensions. Connect to the box situated on the rear side of the panel.

---

## 2.1 Warning

---

- Ambient temperature (i.e. temperature of air in the room where the radiator is situated) must not exceed 30 °C!
- Supply lead must be fitted with a disconnecting device and the distance of disconnected contacts must be at least 3 mm at each pole.
- Damaged supply lead must be replaced by the manufacturer or a serviceman.
- Use countersunk screws to install fixing frames.
- Type model number indicates input (300 = 300 W).
- Use gloves for handling not to pollute the front radiating panel surface.
- Clean with water and detergent, using a small soft brush.
- This appliance is not designed to be used by people (including children) whose physical, sensorial or mental disability or lack of experience and knowledge prevent them from safely operating the appliance, unless they are supervised or were instructed how to use the appliance by a person who is responsible for their safety. Children should be supervised in order to ensure that they won't play with the appliance.

---

## Warranty conditions

---

The supplier provides a warranty of 5 years from date of sale for their product. The warranty does not cover faults caused by transportation, careless manipulation or non-professional installation. The warranty also does not apply in the case of a non-professional intervention into the panel or to everyday wear and tear on the product. You can find the current and full warranty conditions at: [www.fenixgroup.eu](http://www.fenixgroup.eu)

Date of sale:

Serial number:

Type of product:

Signature, Stamp

