CARBON INFRARED HEATER CH1800 XE

User's Manual



- Thank you for purchasing Veito Carbon Infrared Heater. Please read the instructions Thank you for purchasing veito Carbon infrared Heater. Please read the instructions thoroughly before using your heater.
 After reading the instructions, please keep it in a place accessible to all users.
 Ensure you read 'Safety Precautions' in advence and use the product corectly.
 We can not be liable for any damages caused by failure to observe these instructions.
 The product is specified for use with a power supply of 230V 50/60Hz

 
- This manual includes the product warrantly.
 Specifications and contents of this manual may be changed without prior notice, in accordance with our commitment to product quality, design and control.



CONTENTS

	Safety Precautions	3
	Precautions for installation and before use	
	Precautions for install	7
	•How to install	7
	•How to use power	8
	Configuration and name	
_	•Main body	8
	How to use	
_	Operation and stop	
	How to diagnose safety device	9
	Cleaning and maintenance	9
6	Storage Instructions	
1	Troubleshooting	10
ī	Wiring diagram	10
i	Specification	10
1	Product warranty	11
i	Product warranty	11





These precautions are designed for keeping users safe and preventing material damage. Be sure to read them and use the product correctly.

• There are 3 classifications of safety precautions and they are listed in the box below.



Possiblity of death or severe injury in the event of mishandling.

 


Possiblity of death or severe injury in the event of mishandling.



Possiblity of injury and/or material damage in the event of mishandling.

*Meaning of picture signs






Indicate contents that people must carry out



*After reading this, be sure to keep it at a place where other users can refer to it at any time.

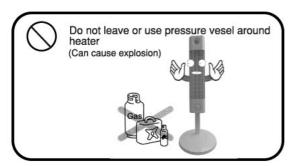



*After reading this, be sure to keep it at a place where other users can refer to it at any time.



Use specific 230V 16A amp

(to prevent fire & electric shock)



Ensure both plug and socket is clean and free from dust when using.



Never use with a damaged power lead, plug or loose wall socket. (this can cause electric shock, short circuiting or fire)



230V

Never remove the plug from the socket by pulling the mains lead. Never touch the plug with wet

(risk of electrocution and/or fire)



Do not extend the power cord. (risk of breakdown or fire)



Ensure you hold the power plug properly when either



plugging in or unplugging.



 
Do not kink or place

the main power lead

under heavy objects. (risk of electric shock

or fire)

Do not overload the dedicated power socket with other equipment.



Always turn off the unit by use of its On/Off switch and never by just pulling the mains plug or tripping the circuit breaker.



Ensure that the unit is properly earthed through the mains power circuit.



Do not install, use or place any combustible liquids or gases near the product. (risk of fire or explosion)



Never place the unit near combustible products such as curtains, carpets etc. This can cause a fire.



Never put hands or objects into the main body of the product. Never touch it immediately after use. (risk of fire burns or electric shock)



Never place combustible objects on the product such as vinyl and plastic items.(can cause a risk of fire)




The heater must not be located immediately below a socket outlet when in use. (risk of fire)






*After reading this, be sure to keep it at a place where other users can refer to it at any time.

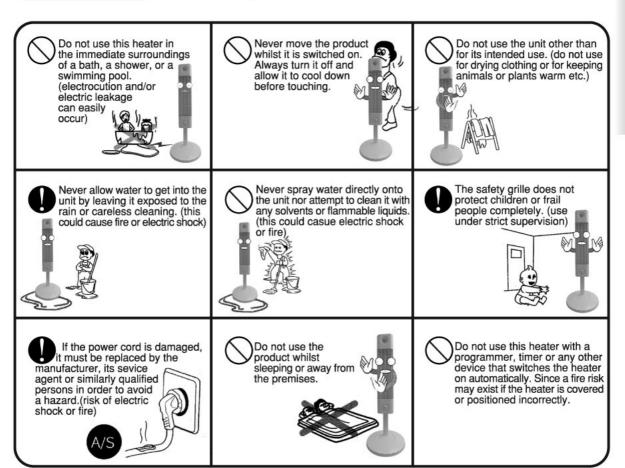




*After reading this, be sure to keep it at a place where other users can refer to it at any time.

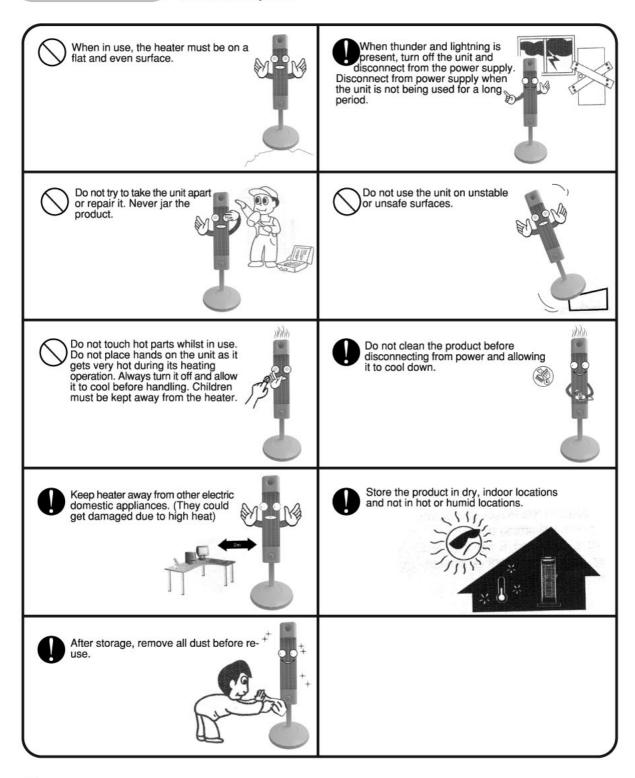


Precautions for installation and before use

PRECAUTIONS FOR INSTALL

*After reading this, be sure to keep it at a place where other users can refer to it at any time.

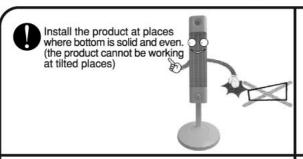

Install the product at places that are visible to people. (frequently observe the product for safety)

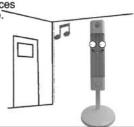

0

Install the product at places where users always reside and be sure to equip fire extinguisher.



Do not install at places with high temperature.



HOW TO INSTALL

*Keep packaking parts because they are necessary in maintaining the heater for a long time.

 Assemble the two parts of the base.



 Place the aluminium profile into the place on the base and push it on a level until it sounds 'click'.



 
Insert the plastic connection part onto the aluminium profile.



Assemble the product stand with the product. Tighten the connection nut adequately as to secure the heater in position. You will re-adjust this height later.



•Always leave a clear space of at least 0.5m from the left, right and rear of the unit. The unit must also have at least 1.5m clear space above it. Never put any obstacles nearer than 1.5m to the front of the unit.



- •Use the unit in places with easy eccess to power sockets and that are well ventilated.
- •Never use connecting terminals in the power lead. Always directly connect the unit to the power.






HOW TO USE POWER

• When using 230V • Put plug into specific outlet for 230V with earth terminal.



Configuration and Name

MAIN BODY

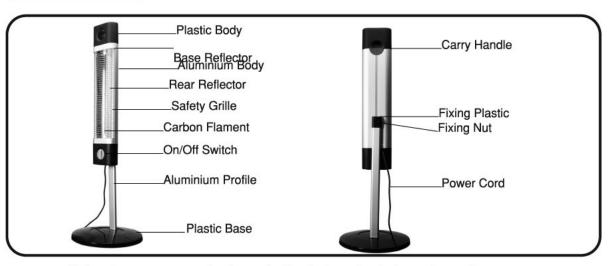

External appearence can be changed without prior notice for improving quality.

How to use

OPERATION AND STOP

It is recommended that persons who may have difficult understanding or operating the appliance controls should not be left unattended while using the appliance. Special considerations should be given to young children and the less able bodied!

- 1. Start operation by using On/Off switch.
- 2. Heater is turned on and operation is started.
- 3. Use On/Off switch to stop.





How to Diognose Safety Device

Veito heater has tilt senser to prevent a risk of fire.



If heater falls over, it will automatically switch off.





Cleaning and Maintenance

Precautions for examination and handling:

Handle heater when it is completely cooled down and power is cut off.

- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by

a qualified service agent. Do not operate the heater in this condition.

Do not attempt to open the case of the heater at any time, there are no customer serviceable parts inside. Do not use powerful abrasive or solvent cleaning fluids when cleaning the heater as they may damage the plastic parts. Use only a clean, dry cloth to clean the external surfaces of the heater only.



Storage and Instructions

 
 Disconnect from power supply.



·Ensure main body is clean



Cover the heater with the coveringsupplied when you purchased the unit. Keep it in a well ventilated dry place.







Troubleshooting

This heater was manufactured conscientiously and checked several times before delivery.

If you experience a malfunction, please try to rectify the fault yourself first with the help of this table. In doing do, you will avoid the unnecessary expense of customer service assistance.


If a foult in your heater can not be rectified with the aid of this table, please contact the Central Customer Service

Repairs must only be carried out by authorized professionals.

	Syptoms	How to deal with	
Unit is not working	Is electric supply working?Check that the power plug is plugged in.Is the circuit breaker off?	Check the main power supply is working. Turn on the product once again after plugging in. Reset circuit breaker.	



Wiring Diagram

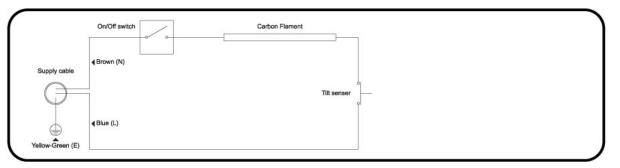



Specification

model		
classification	CH1800 XE	- 8
Heating Capacity BTU/h	8000	
Maximum Power (W)	1800	
Space for use (m²)	20	
Power supply	230V 50/60Hz	
Size(mm) (WxLxH)	400x400x1350	
Product weight (kg)	2.8	
Safety device	Tilt senser equipped	
Controlling method	On/Off Switch	
Controlling function	On/Off Control	

WARRANTY

(Applicable to first retail purchaser only)

Veito Carbon Infrared Heater give more reliable performance, comfort and durability the more they are used. They are built under a strict quality assurance regime which includes inspection both during and after production and exhaustive reliability testing.

In the unlikely event you have any problems, please contact your dealer or distributor. If the problem is as a result of a production fault or failure, repairs will be undertaken free of charge during the period of warranty subject to the following warranty conditions:

- 1. The warranty period is 12 months from the date of first purchase.
- 2.If the problem has been caused by customer error or misuse, abuse or damage, then all repairs will be charged for.
- 3. This warranty card is valid within your country.
- 4. Proof and date of purchase must be supplied.
- 5. Please complete the details below and keep this warranty in a safe place.
- 6.All transport charges back to the dealer are at the customers cost. Keep all original packaging to facilitate return. Return to customer will be at dealers cost

DESCRIPTION		CAR	RBON INFRARED HEATER					
MODEL		CH1800 XE						
DATE OF PURCH	HASE		PRODUCT SERIAL NO:					
Warranty Period		() Months						
DISTRIBUTOR	Nan	ne of Company						
DISTRIBUTOR	Tele	phone No.						
·								
CUSTOMER DETAILS		Name:						
		Address:						
		Telephone:						

www.veito.com

veito